



Fiber Video Channel Blocking Instructions


701-483-4000 or 1-888-225-5282

On your remote control press the “Menu” button

Use the arrow keys on remote control so the gold box is around “Settings” press OK on the remote control.



Enter password (the default password is 0) press OK on the remote control.

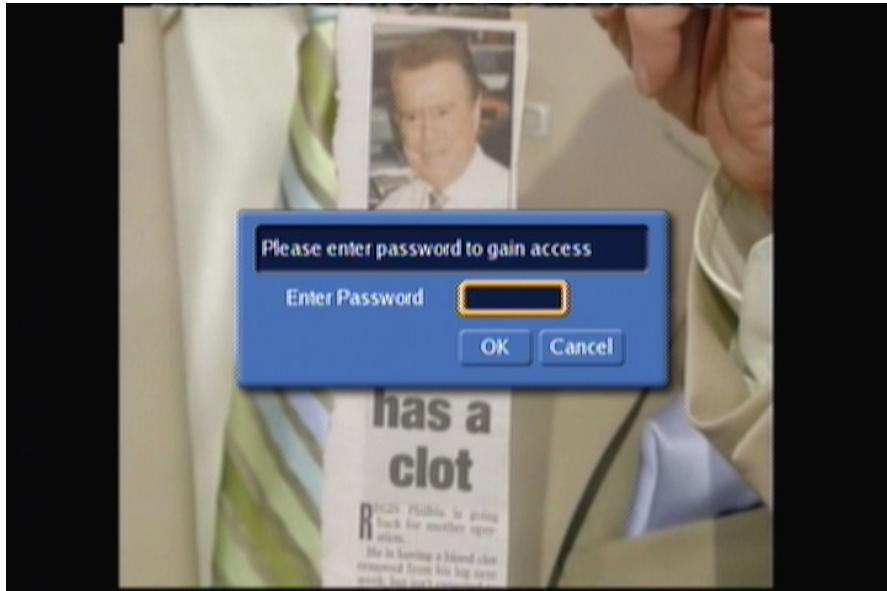





Fiber Video Channel Blocking Instructions

701-483-4000 or 1-888-225-5282

Use the down arrow on your remote control so the gold box is around “Channel Blocking” and press OK button on the remote control so the check mark shows in the white box next to “Channel Blocking”

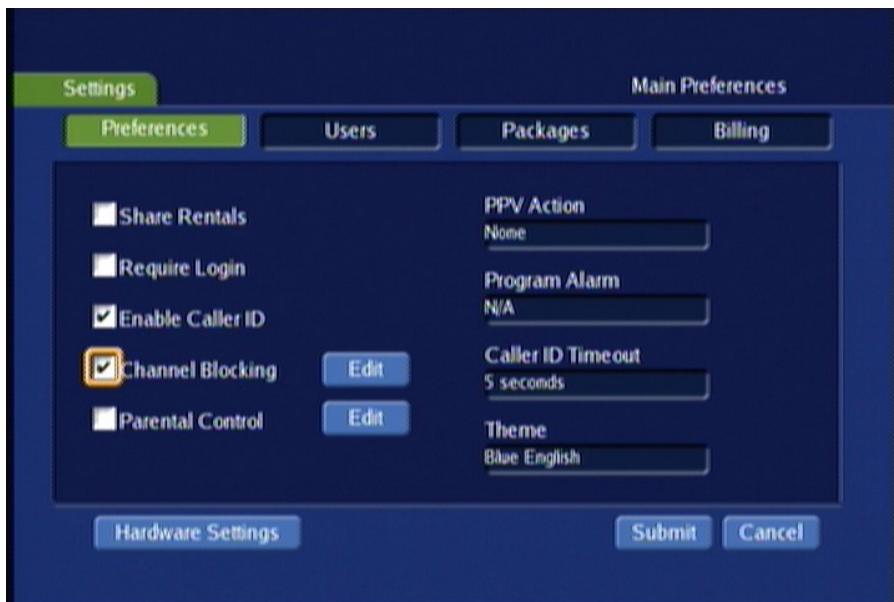

Use the right arrow on the remote control so the gold box is around the “Edit” button and select OK on your remote control


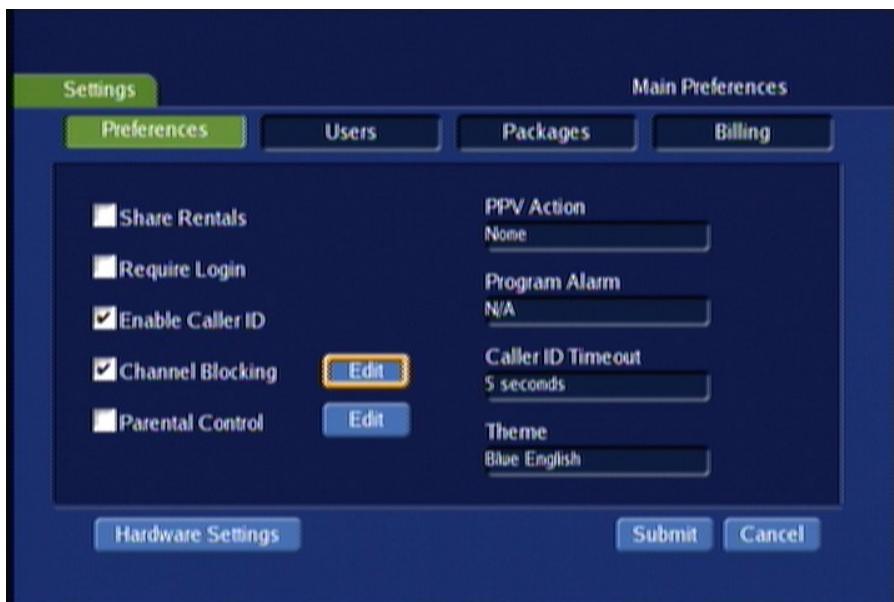


Click OK to say YES to save changes- Click OK to updated successfully



Fiber Video Channel Blocking Instructions

701-483-4000 or 1-888-225-5282

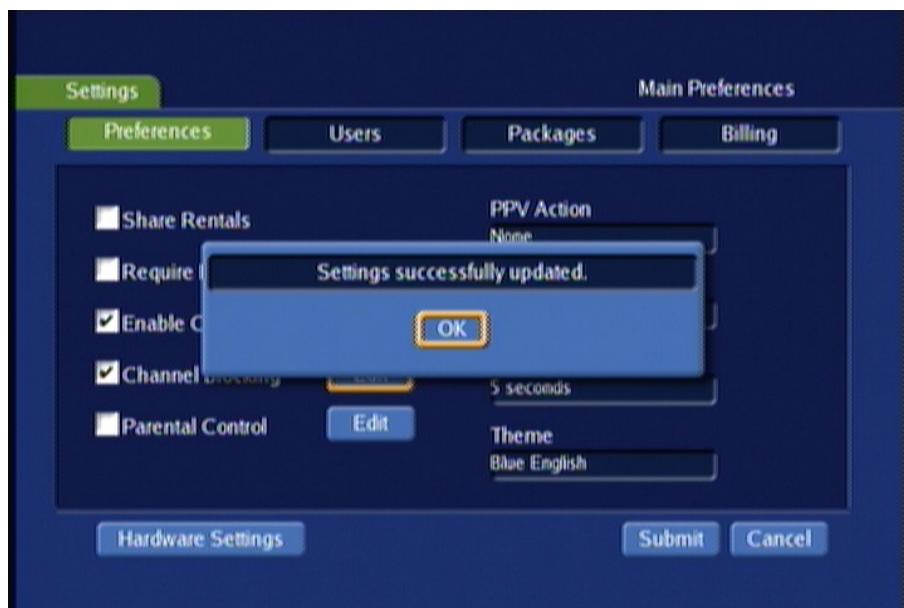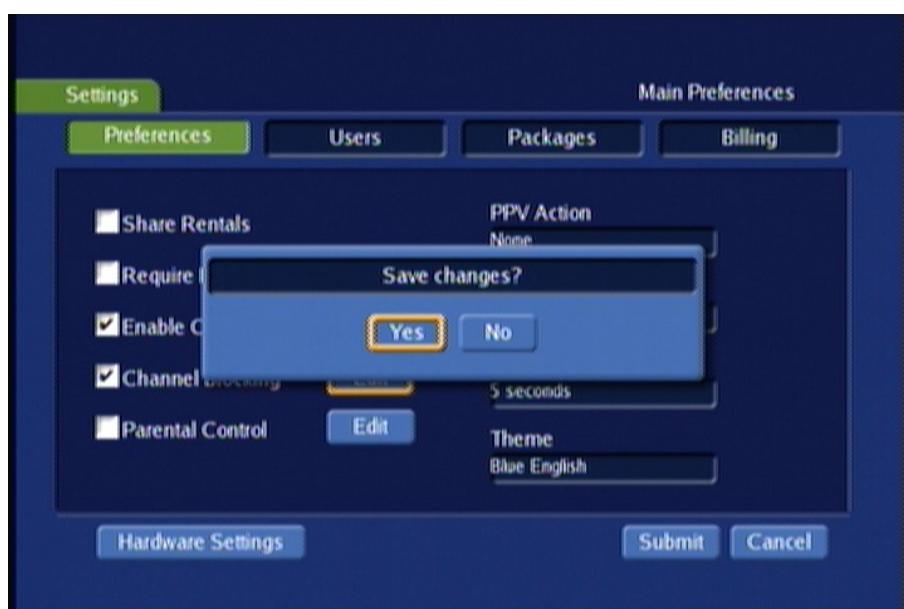


This screen will show all channels provided. Use the down/up arrow on the remote control until the channel you wish to block has the gold box around it. Press OK on your remote control to select the channel. Continue scrolling through list and selecting channels until all channels you wish to block have been selected.




Fiber Video Channel Blocking Instructions

701-483-4000 or 1-888-225-5282

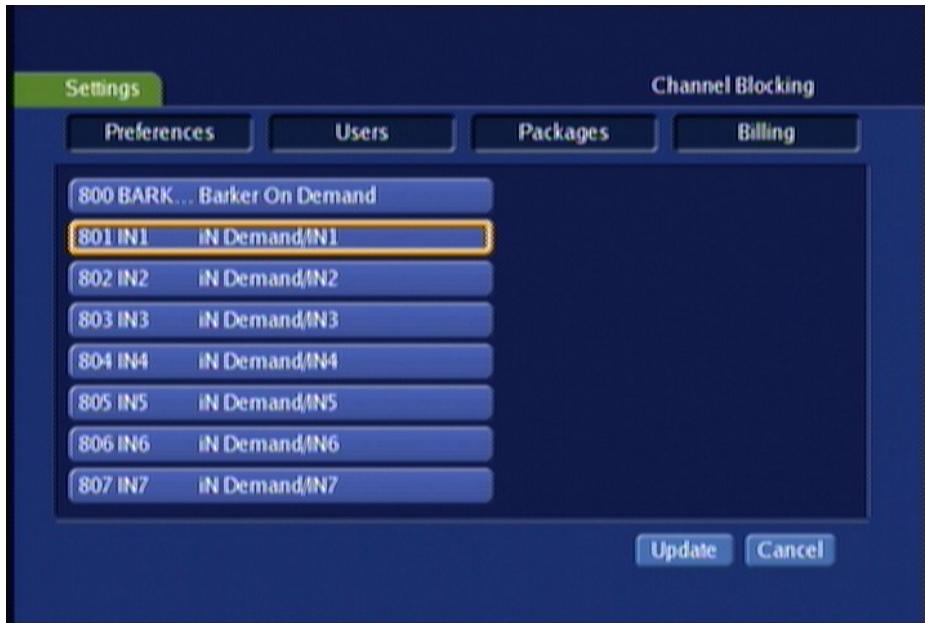

Use the RIGHT arrow on your remote control so the gold box is around “Update” and press OK on your remote control

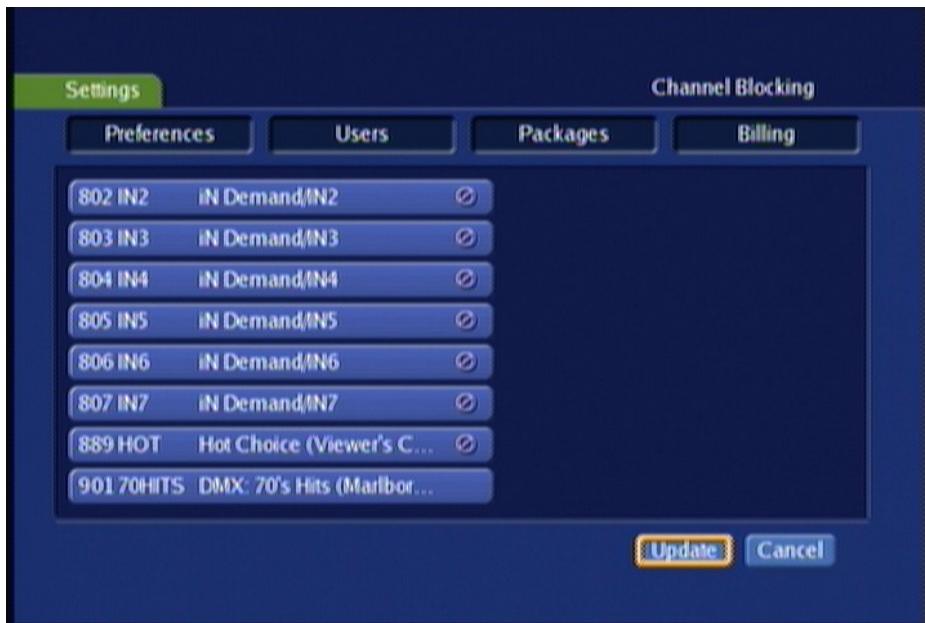

From the preferences screen use the arrows on your remote control so the gold box is around “Submit” and press OK on your remote control.



Fiber Video Channel Blocking Instructions

701-483-4000 or 1-888-225-5282

The screenshot shows a web-based configuration interface for channel blocking. At the top, there's a navigation bar with tabs: 'Settings' (highlighted in green), 'Main Preferences' (highlighted in blue), 'Preferences' (selected), 'Users', 'Packages', and 'Billing'. Below this is a list of settings with checkboxes:

<input type="checkbox"/> Share Rentals	PPV Action None
<input type="checkbox"/> Require Login	Program Alarm N/A
<input checked="" type="checkbox"/> Enable Caller ID	Caller ID Timeout 5 seconds
<input checked="" type="checkbox"/> Channel Blocking	<button>Edit</button>
<input type="checkbox"/> Parental Control	<button>Edit</button>

At the bottom of the main panel are three buttons: 'Hardware Settings', 'Submit' (which is highlighted with a yellow border), and 'Cancel'.

The channels you selected will now be blocked from viewing and from your on-screen guide.
PPV channels start at 801 and music channels start at 900.

You can also block programming based on TV rating. This is done using the “Parental Controls” option.

This is outlined on pages 46 & 47 of the Digital Video Users Guide.